


29/9/16

CORP  
BOMBA 1"  
10y, KM 102

# KM0404102 PUMP

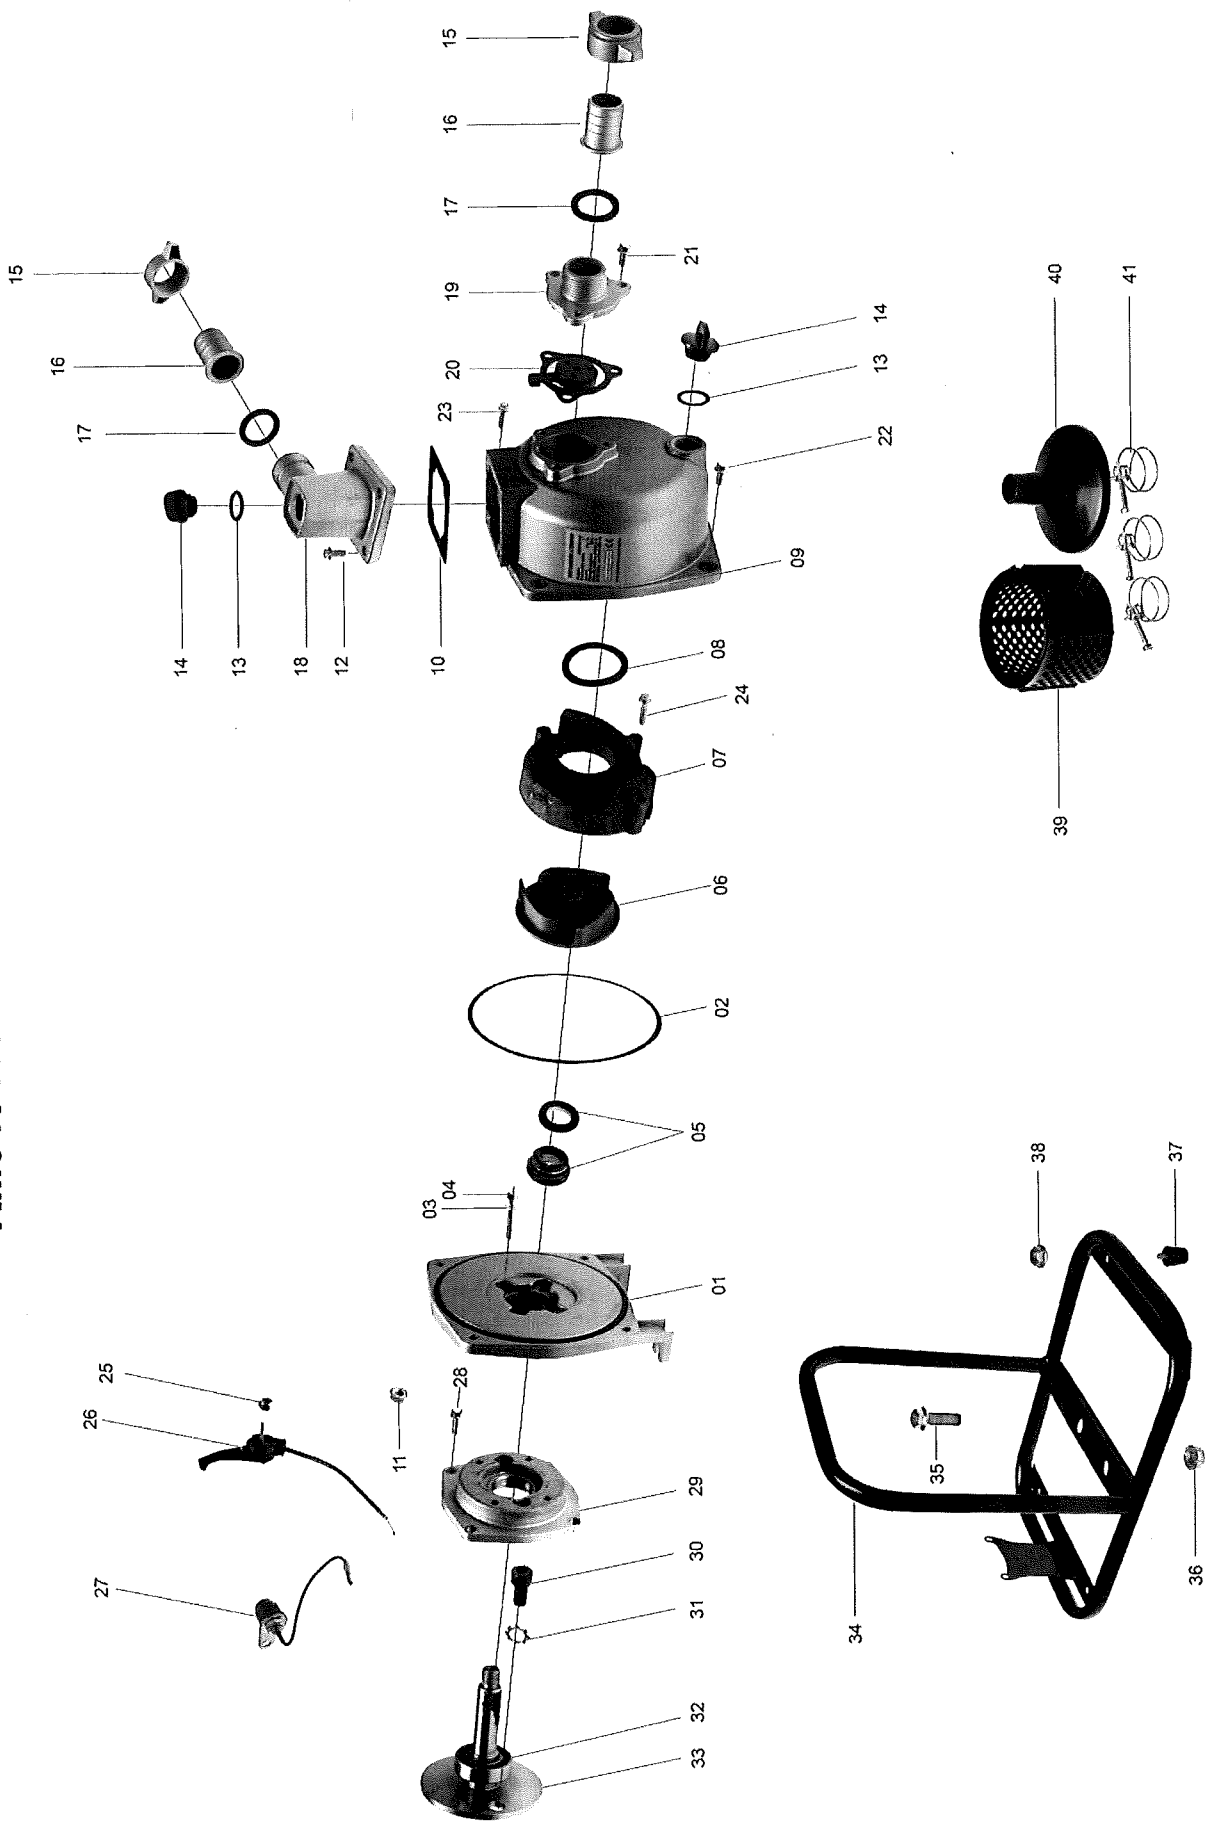


**KM0404102 PART LIST FOR PUMP PART**

FIG. NO.	DESCRIPTION	QTY	FIG.NO.	DESCRIPTION	QTY
KM0404102-P1	PUMP COVER	1	KM0404102-P26	THROTTLE SWITCH	1
KM0404102-P2	O RING	1	KM0404102-P27	STOP SWITCH	1
KM0404102-P3	SEALED WASHER	1	KM0404102-P28	SCREW M6*18	4
KM0404102-P4	SCREW M6*45	4	KM0404102-P29	CONNECTOR A	1
KM0404102-P5	MECHANICAL SEAL	1	KM0404102-P30	SCREW M8*16	2
KM0404102-P6	IMPELLER	1	KM0404102-P31	WASHER	2
KM0404102-P7	DIFFUSER	1	KM0404102-P32	BEARING	1
KM0404102-P8	O RING	1	KM0404102-P33	CONNECTOR B	1
KM0404102-P9	PUMP BODY	1	KM0404102-P34	PEDESTAL	1
KM0404102-P10	OUTLET SEALED WASHER	1	KM0404102-P35	SCREW M8*20	2
KM0404102-P11	NUT M8	2	KM0404102-P36	NUT M8	2
KM0404102-P12	SCREW M6*18	4	KM0404102-P37	RUBBER CUSHION	4
KM0404102-P13	O RING	2	KM0404102-P38	NUT M8	4
KM0404102-P14	WHORL PLUG	2	KM0404102-P39	WATER FILTER	1
KM0404102-P15	SPANNER	2	KM0404102-P40	WATER FILTER CAP	1
KM0404102-P16	PIPE	2	KM0404102-P41	CLAMP	3
KM0404102-P17	SEALED WASHER	2			
KM0404102-P18	OUTLET FLANGE	1			
KM0404102-P19	INLET FLANGE	1			
KM0404102-P20	CHECK VALVE	1			
KM0404102-P21	SCREW M6*18	3			
KM0404102-P22	SCREW M6*20	2			
KM0404102-P23	SCREW M6*30	2			
KM0404102-P24	SCREW	1			
KM0404102-P25	NUT M5	1			

52/9/16

# KM0404102 ENGINE

Handwritten notes:  
1. 109. KM102  
2. 109. KM102  
3. 109. KM102  
(109. KM102)

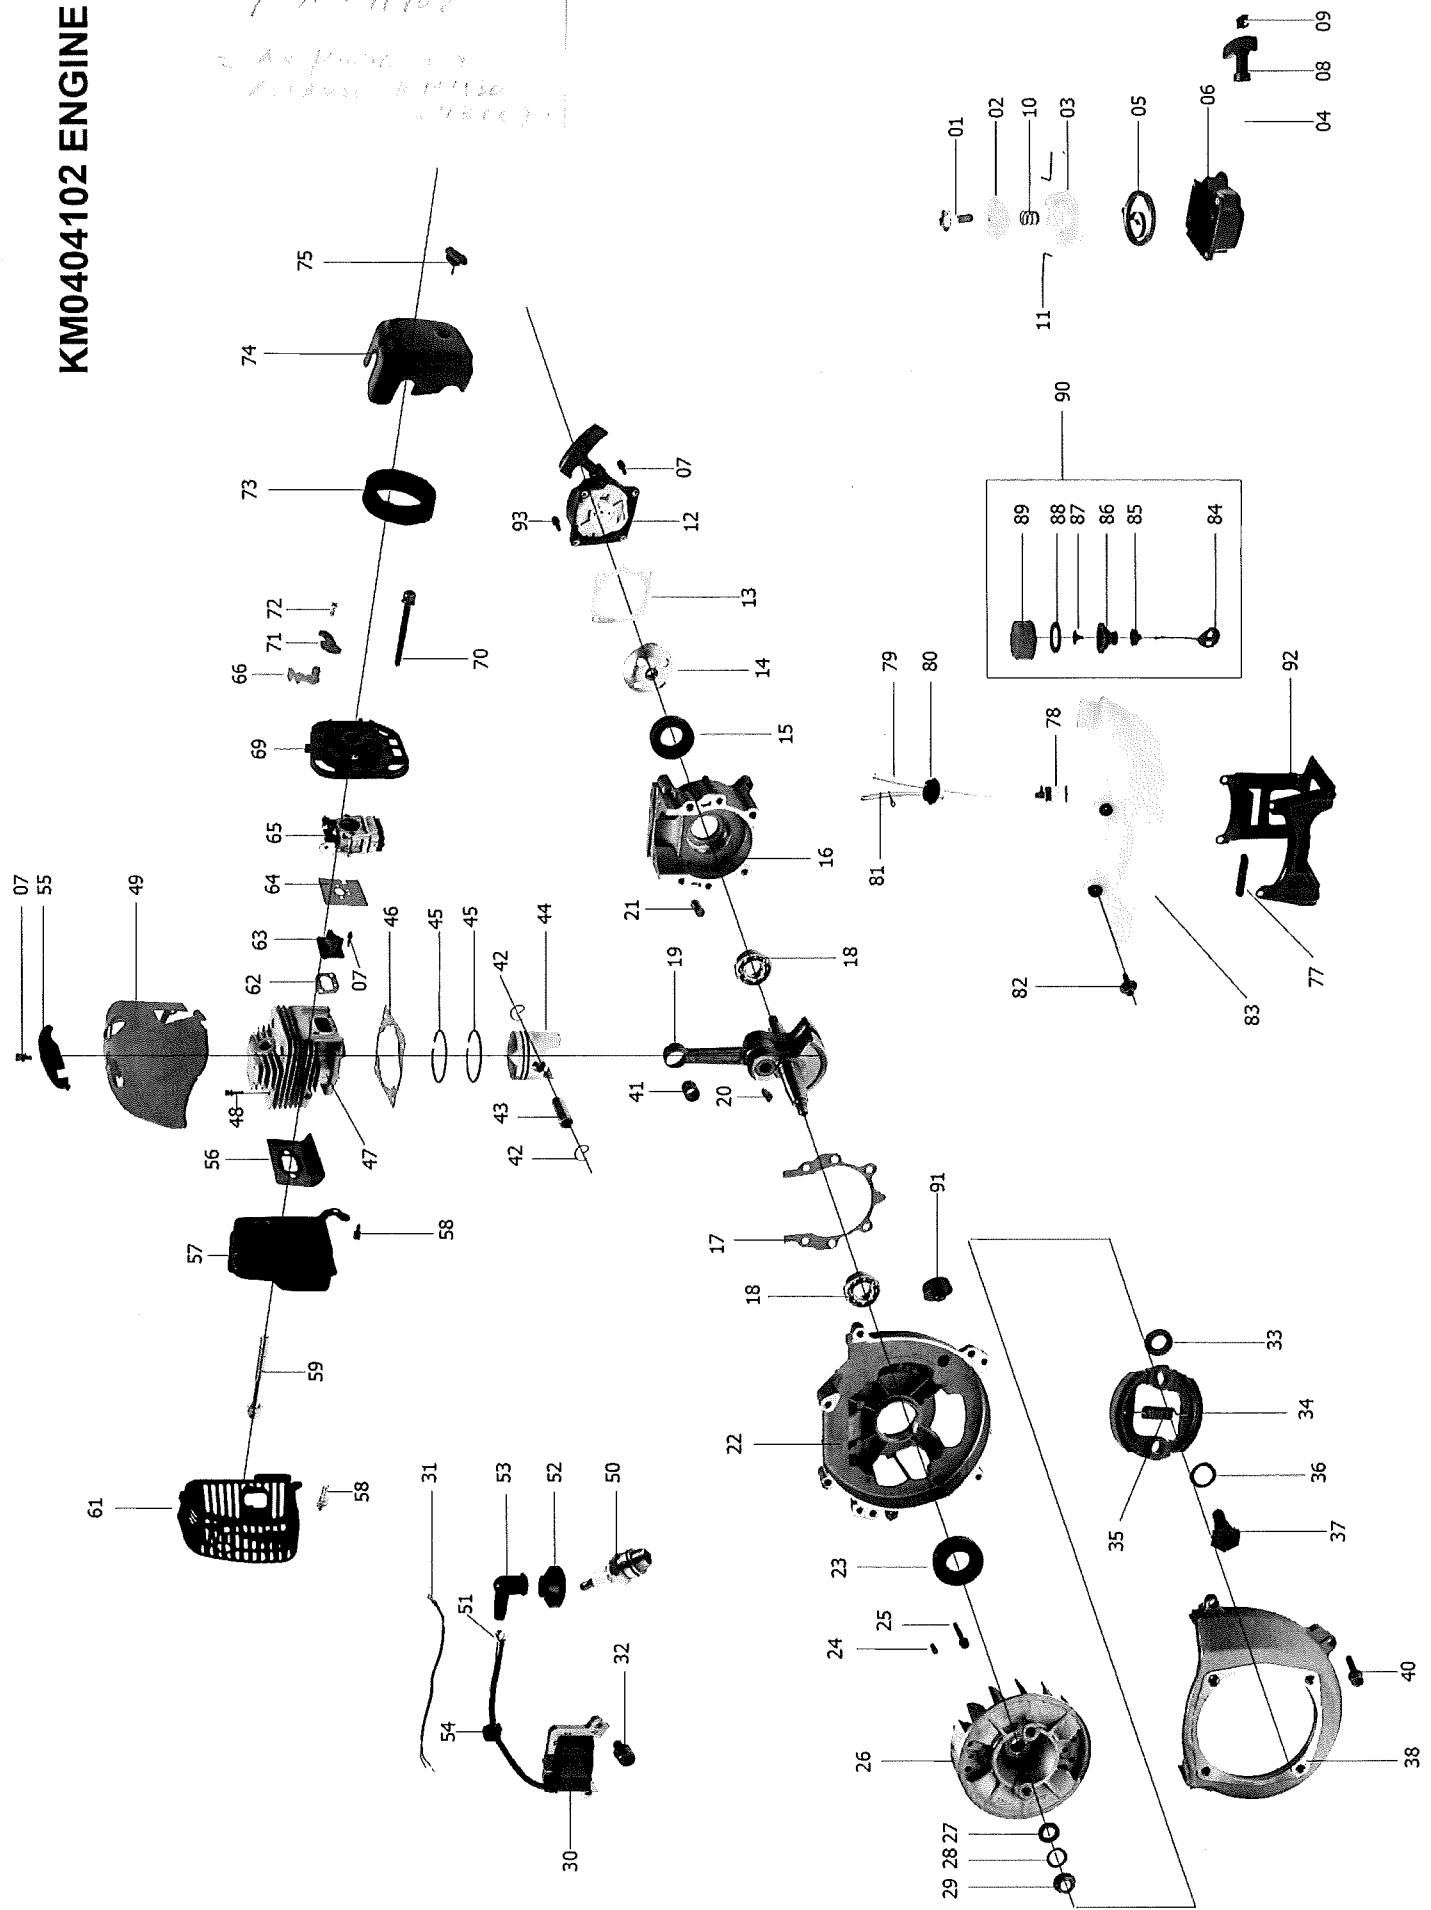

SPARE PARTS LIST OF KM0404102(ENGINE)							
Fig.NO.	PART NO.	DESCRIPTION	QTY	Fig.NO.	PART NO.	DESCRIPTION	QTY
KM0404102-E1	1E36FE.9-3	SCREW	1	KM0404102-E26	1E40F-5.3-	FLYWHEEL	1
KM0404102-E2	1E36FE.9-4	RATCHET	1	KM0404102-E27	GB/T859	FLAT WASHER	1
KM0404102-E3	1E36FE.9-1	STARTER ROPE REEL	1	KM0404102-E28	GB/T97.1	SPRING WASHER	1
KM0404102-E4	1E36FE.9-5	STARTER ROPE	1	KM0404102-E29	GB6170	NUT M8	1
KM0404102-E5	1E36FE.9-7	RECOIL SPRING	1	KM0404102-E30	1E40F-5.3-	IGNITION	1
KM0404102-E6	1E36FE.9-8	STARTER BODY	1	KM0404102-E31	1E40F-5.3.1	WIRE	1
KM0404102-E7	GB9074.4	SCREW M5*20	5	KM0404102-E32	GB9074.13	SCREW M5*20	2
KM0404102-E8	1E40FP-3Z.4-2	STARTER HANDLE	1	KM0404102-E33	1E36F-3	FLAT WASHER	2
KM0404102-E9	1E40FP-3Z.4-10	RING	1	KM0404102-E34	1E40F-5.6-1	SPRING	1
KM0404102-E10	1E36FE.9-6	SPRING	1	KM0404102-E35	1E40F-5.6.1	EXPANDER	2
KM0404102-E11	1E36FE.9-2	STARTER POLE	2	KM0404102-E36	1E40F-5-11	WAVE WASHER	2
KM0404102-E12	1E36FE.9	STARTER	1	KM0404102-E37	1E40F-5-12	SCREW PIN	1
KM0404102-E13	1E40F-5-10	STARTER GASKET	1	KM0404102-E38	1E36F-2-8	FAN COVER	1
KM0404102-E14	1E36FE.7	STARTER REEL	1	KM0404102-E39			
KM0404102-E15	1E36F.2	OIL SEAL	1	KM0404102-E40	GB9074.13	SCREW M5*25	2
KM0404102-E16	1E40F-5.8-2	CRANK CASE	1	KM0404102-E41	1E40F-5.4-2	BEARING	1
KM0404102-E17	1E40F-5.8-4	CRANK CASE GASKET	1	KM0404102-E42	1E40F-03.02.01	RING	2
KM0404102-E18	GB/T276	BEARING 6202/P5	2	KM0404102-E43	1E40F-5.4-1	PISTON PIN	1
KM0404102-E19	1E40F-5.4.1	CRANK SHAFT	1	KM0404102-E44	1E46FP.6-3	PISTON	1
KM0404102-E20	GB1099	KEY 3*5*13	1	KM0404102-E45	1E40FP-3Z.3-5	PISTON RING	2
KM0404102-E21	GB119	PIN B5*10	2	KM0404102-E46	1E40F-5-6	CYLINDER GASKET	1
KM0404102-E22	1E40F-5.8-1	CRANK CASE	1	KM0404102-E47	1E40F-5-4	CYLINDER	1
KM0404102-E23	1E40F-5.9	OIL SEAL	1	KM0404102-E48	GB/T70.1	SCREW M5*18	4
KM0404102-E24	GB119	PIN B4*10	2	KM0404102-E49	1E40F-HS.3	GUIDE COVER	1
KM0404102-E25	GB9074.4	SCREW M5*30	4	KM0404102-E50	L6(LD)	SPARK PLUG	1

## KM0404102 PART LIST FOR ENGINE PART

KM0404102-E51	1E40F-3A.8-2	SPRING	1	KM0404102-E76			
KM0404102-E52	1E34F.5-3	PLUG CAP	1	KM0404102-E77	1E40F-5A-2	RUBBER CUSHION	1
KM0404102-E53	1E34F.5-2	CAP	1	KM0404102-E78	1E34F.9.2-3	FUEL FILTER	1
KM0404102-E54	1E40F-5.3-1	PLUG	1	KM0404102-E79	1E36FE.10.1-2	FUEL PIPE (LONG)	1
KM0404102-E55	1E40F-HS-2	COVER	1	KM0404102-E80	1E36FE.8.1-1	PLUG	1
KM0404102-E56	1E40F-HS-1	MUFFLER GASKET	1	KM0404102-E81	1E36FE.10.1-1	FUEL PIPE (SHORT)	1
KM0404102-E57	1E40F-HS.2	MUFFLER	1	KM0404102-E82	GB/T9074.4	SCREW M5*16	2
KM0404102-E58	GB9074.4	SCREW M5*12	4	KM0404102-E83	1E40F-HS.5.1	FUEL TANK	1
KM0404102-E59	1E40F-5-13	SCREW M6*60	2	KM0404102-E84	1E32FL.6.2-4	CHAIN	1
KM0404102-E60				KM0404102-E85	1E32FL.6.2-3	END COVER	1
KM0404102-E61	1E40F-HS.4	MUFFLER COVER	1	KM0404102-E86	1E32FL.6.2-2	INSIDE COVER	1
KM0404102-E62	1E40F-5-2	ADMITTING PIPE GASKET	1	KM0404102-E87	EB-415.4.1.1-1	INLET	1
KM0404102-E63	1E40F-5A.2	ADMITTING PIPE	1	KM0404102-E88	CG420.1.3.1-2	O RING	1
KM0404102-E64	1E40F-5A-1	CARBURETOR GASKET	1	KM0404102-E89	1E32FL.6.2-1	FUEL TANK LID	1
KM0404102-E65	1E40F-5A.8	CARBURETOR	1	KM0404102-E90	1E32FL.6.2	FUEL TANK LID ASSY.	1
KM0404102-E66	1E34F.1-2	CHOKER HANDLE	1	KM0404102-E91	1E40F-5A-3	RUBBER CUSHION	2
KM0404102-E67				KM0404102-E92	1E40F-5A.3	STAND	1
KM0404102-E68				KM0404102-E93	GB9074.13	SCREW M5*30	2
KM0404102-E69	1E34F.1.1	CLEANER INSIDE COVER	1	KM0404102-E94			
KM0404102-E70	GB/T9074.4	SCREW M5*50	2	KM0404102-E95			
KM0404102-E71	1E34F.1-3	CHOKER	1	KM0404102-E96			
KM0404102-E72	GB/T845	SCREW ST4.2*12	1				
KM0404102-E73	1E34F.1-1	AIR FILTER	1				
KM0404102-E74	1E40F-HS.1-1	CLEANER OUTSIDE COVER	1				
KM0404102-E75	1E34F.1.2	KNOB	1				